





Tuff Industries
9570 Bottom Wood Lake Rd.,
Lake Country, B.C., V4V 1S7
Toll Free: 1-877-860-9333
Fax: (250) 766-1366
www.tufdek.com

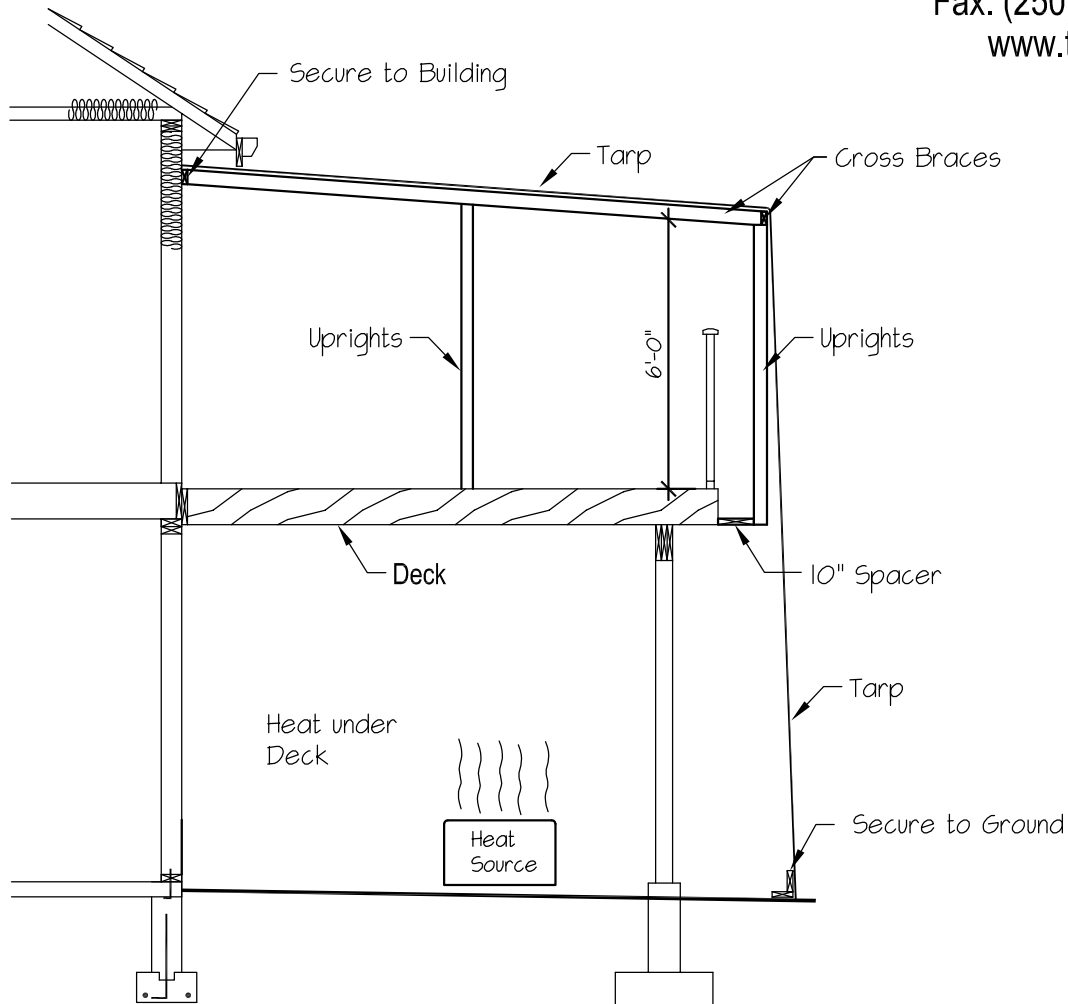

NOTES:

- 1) All of the outside perimeter must be tarped so that the work area is air and water tight, all the way to the ground.
- 2) A 10" work space is needed around the whole perimeter, and a 6' work space between the tarp and the deck so installer can stand up.
- 3) The heat source needs to be under the deck, so that the plywood and air space is warm.
- 4) Heat source must be on 24 hrs. before and 48 hrs. after deck installation. The heater must maintain a minimum temperature of 10 degrees Celcius.
- 5) Plywood must be completely dry before installation is started.



TD-30

Tarping Directions